

Dimension

Consist of 0.15" thick or as they required. PP
Polyester 0.15" thick fabric cut in size and mounted
1.12" x 1.12" on 1.12" x 1.12" clear polyester back.
The strips are spaced 0.15" apart.
The strips are placed 0.15" apart.
Each box contains one panel, both measuring
5.48" x 1.12" (4.37" x 1.12" (1200mm))
or as they required.

Each box contains
• 94.45" x 1.12" (2400mm) (W)
• 1.12" x 1.12" (2400mm) (H)
• 0.62" x 1.12" (160mm) (D)

How to cut a
the dimension
that you need

Dimension

Consist of 0.15" thick or as they required. PP
Polyester 0.15" thick fabric cut in size and mounted
1.12" x 1.12" on 1.12" x 1.12" clear polyester back.
The strips are spaced 0.15" apart.
The strips are placed 0.15" apart.
Each box contains one panel, both measuring
5.48" x 1.12" (4.37" x 1.12" (1200mm))
or as they required.

Each box contains
• 94.45" x 1.12" (2400mm) (W)
• 1.12" x 1.12" (2400mm) (H)
• 0.62" x 1.12" (1600mm) (D)

How to cut a
the dimension
that you need

Properties of real wood veneer

Natural wood veneer can vary in color, grain structure and appearance from strip to strip and panel to panel.

The diagram shows a cross-section of a wood veneer panel. It consists of a thin layer of wood (veneer) bonded to a thicker substrate. The veneer layer is labeled with a thickness of 1/8" (3mm). The substrate is labeled with a thickness of 1/2" (12mm). The total thickness of the panel is labeled as 5/8" (15mm). The panel is shown with a diagonal grain pattern.

Properties of real wood veneer
Natural wood veneer can vary in color, grain structure and appearance from strip to strip and panel to panel.

[illegible]

How to cut and drill

Care and maintenance

We recommend adding protective finish to the panels as well as to the furniture. The natural oil look perfect floor of the heavy king will wear out faster if you do not have king oil applied every 6 months. When a dry cloth can keep the panels down.

Fire rating

The acetate fire-retardant carries a class B fire rating following certification ASTM E84, 14.

Care and maintenance

Fire rating
The acoustic felt has a fire rating following

Fire ratings

There are three different options for installing

There are three different options for installing

Technical Drawing

FIGURE 1

Technical Drawing

FIGURE 1



the graph, the 0.82 panel, with 1.8" timber batons mineral wool insulation an absorber (2 MHz).



Sound Absorption Coefficients for Acoustic Panels.

Sound Absorption Coefficients for Acoustic Panels.




0.82" panel,
wall, obtains an
of 0.3 (Nfr).



efficient



ACoustic PANELS
INSTALLATION INSTRUCTIONS

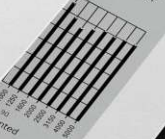


**GRID PANEL WALL
INSTALLATION DIAGRAM**

1. Get started

Install the first grille acoustic panel here, and the sides of the MDF should be located closest to the corners.


2. Attach acoustic panels to the wall.

Use a water pass to say the walls straighten when installing each panel

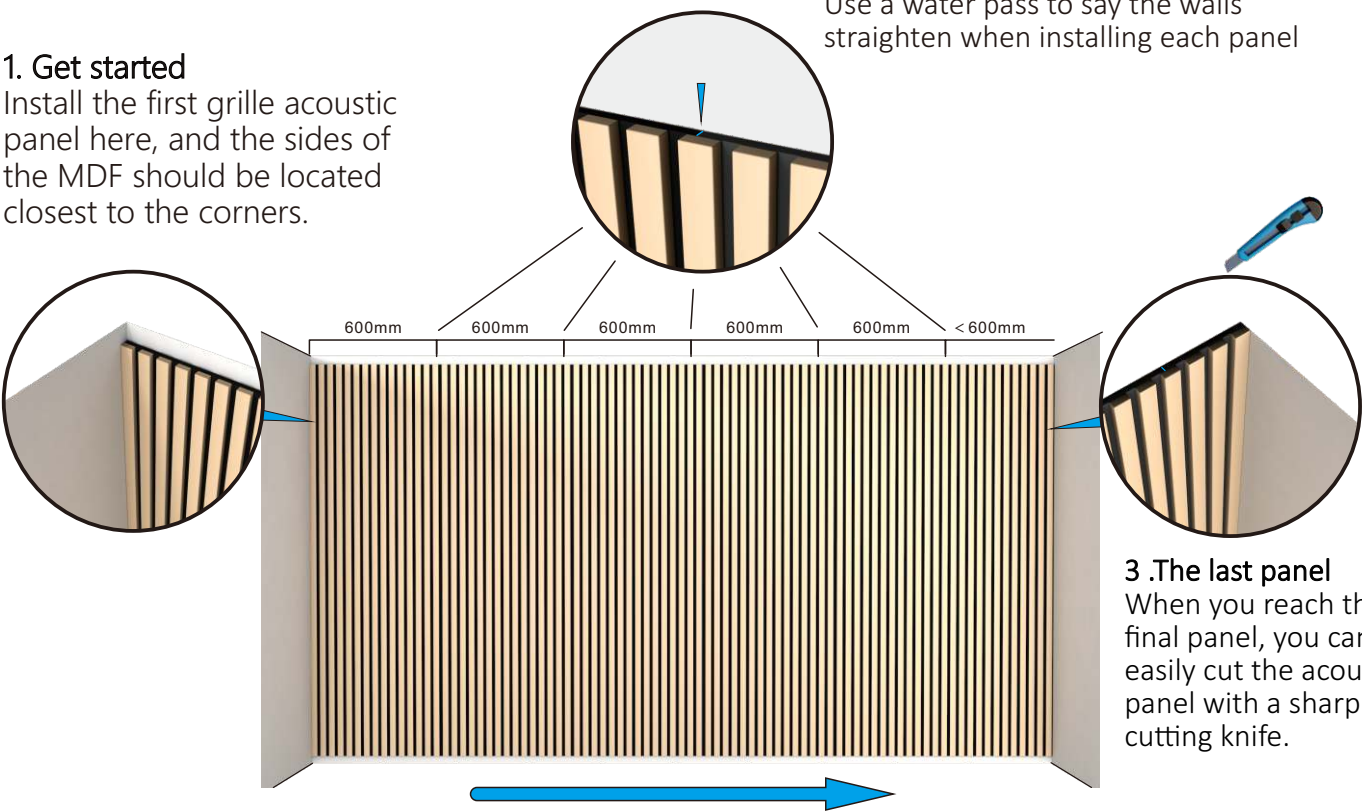


3. The last panel



When you reach the final panel, you can easily cut the acoustic panel with a sharp cutting knife.

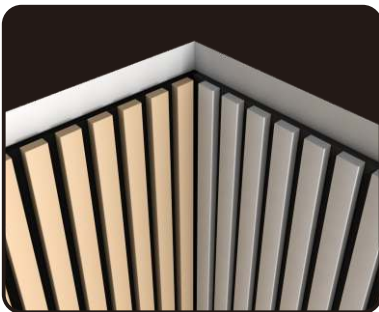

Installation of interior corners

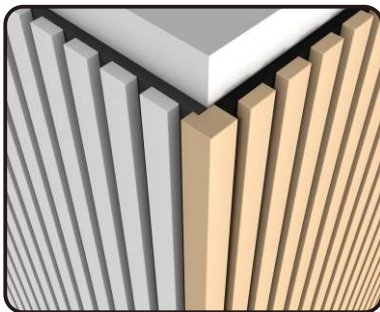

Installation of outer corners

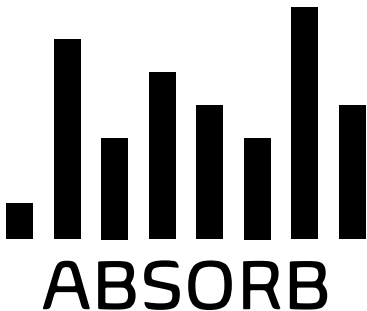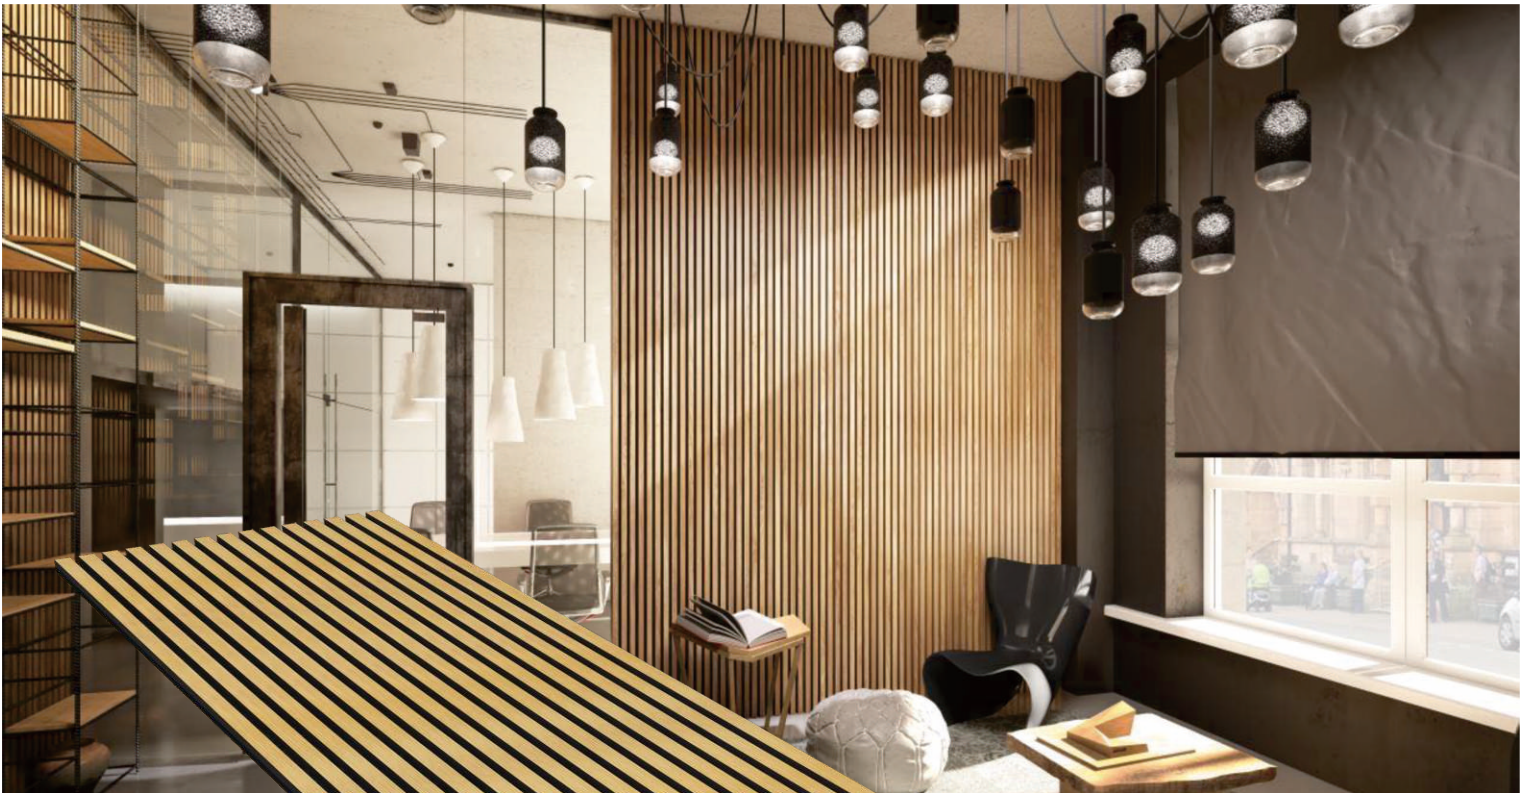

**ACOUSTIC PANELS
INSTALLATION INSTRUCTIONS**

Dimension

Consists of a 0.35" black or grey recycled PET Polyester acoustic fabric on which are mounted 1.02" x 0.47" strips in colored dark brown or black recycled MDF veneered with real wood veneer. The strips are spaced 0.55" apart.


Each box contains one panels, both measuring 94.48" x 23.62". These panels will join next to each other seamlessly.

Each box covers:

- 94.48" / 2400mm (H) 47.24" / 1200mm (H)
- 23.62" / 600mm (W)
- 0.82" / 21mm (D)

Properties of real wood veneer

Natural wood veneer can vary in color, grain structure and appearance from strip to strip and panel to panel.

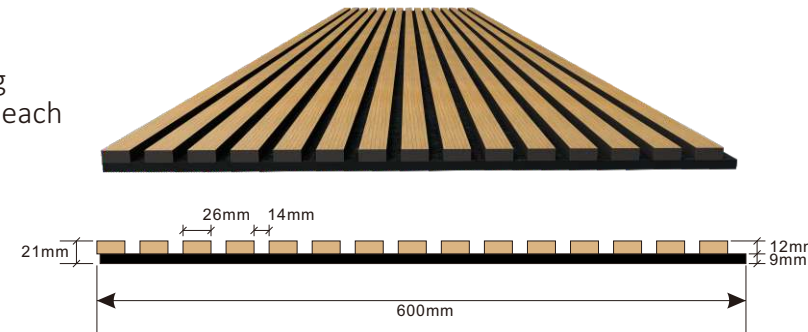


How to cut and drill

When sawing or drilling the acoustic panel, it is recommended that you first tape the area where the cut is made.

should be with regular masking tape. Screw or staple the slats 50 mm inside the intended saw cut. Use a fine-toothed hand saw for veneer or a countersink/circular saw with a fine-toothed blade equipped with a guide rail for best results. Carefully sand the cut with sandpaper (fine-grained 240).

The polyester fabric of the acoustic panel is easily cut with a sharp blade.

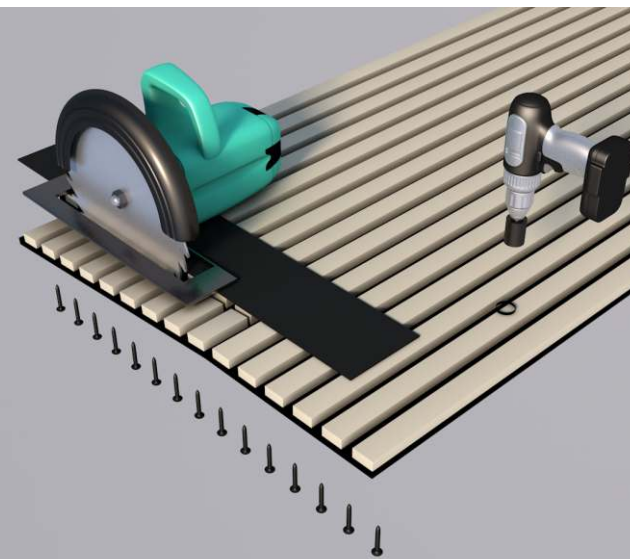


Care and maintenance

We recommend adding a protective finish to the panels if possible. Something like wood oil is perfect as it protects and keeps the natural look and feel of the wood. Once this is applied, light dusting or hovering will prevent any dust build-up. If you choose to keep the panels without a finish, then a dry cloth can wipe the panels down.

Fire rating

The acoustic felt backing carries a class B fire rating following certification ASTM E84-16.

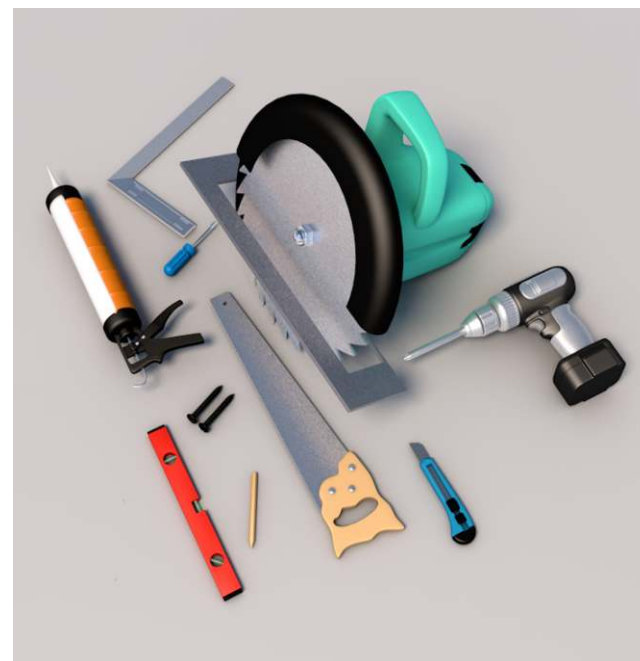

How to install

There are three different options for installing.

1. Gluing straight onto the wall: A construction glue or grab adhesive is recommended for this.

2. Screwing directly into the wall: Using black screws for the black backing option or silver or grey screws for the grey backing, the panels can be screwed directly into the wall through the acoustic felt. We recommend a minimum of 9 screws per panel at 3.15" intervals across the width and 24" intervals down the length of the panel. If installing into ceilings, make sure they are screwed into ceiling joists. Please make sure the correct fixings are used if going into plasterboard, for example.

3. Screwing the panels into 1.8" timber battens: We recommend screwing 1.8" timber battens to the wall and then screwing the panels directly into the battens through the acoustic felt to achieve optimum sound absorption. Combined with Rockwool behind the panels between the battens, this will achieve Class A sound absorption.

4. As shown in the picture, install the light steel keel on the wall with a distance of 3.94" from the wall, and the recommended distance between the vertical keel is 23.6", and the horizontal keel can be adjusted according to the actual situation. The middle of the keel needs to be filled with sound insulation cotton to obtain a more perfect sound absorption effect.

The product can be fixed on the keel by screws.

Technical Drawing

FIGURE 1

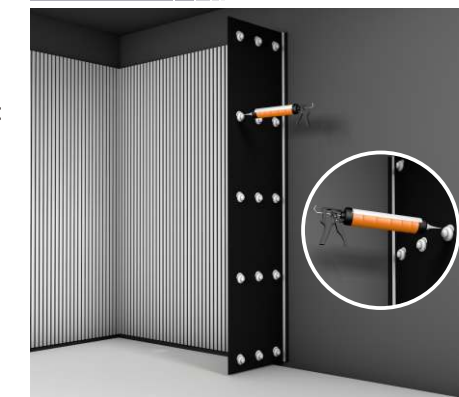


FIGURE 2

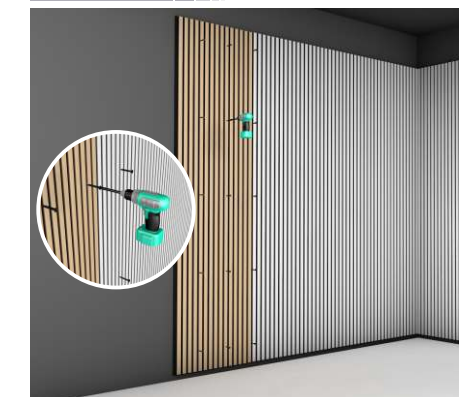


FIGURE 3


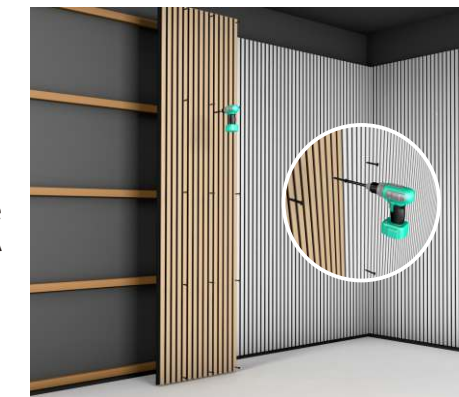



FIGURE 4

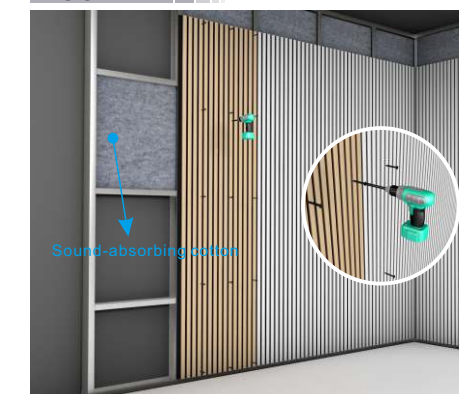

Sound Absorption Coefficient for Acoustic Panels.


Laboratory measurements of sound absorption coefficient were carried out in a reverberation room according to the test method of EN ISO 354:2003.

Panel mounted directly to the wall

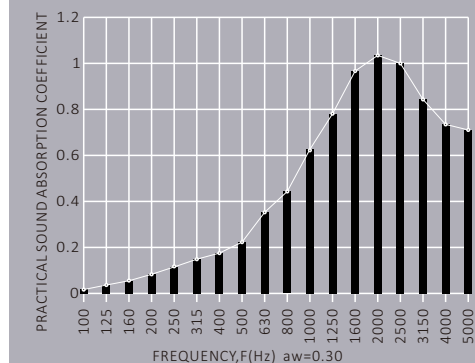


As seen in the graph, the 0.82" panel, mounted directly to the wall, obtains an absorption coefficient of 0.3 (MH).

Panel mounted with 1.8" timber battens spacing and mineral wool insulation

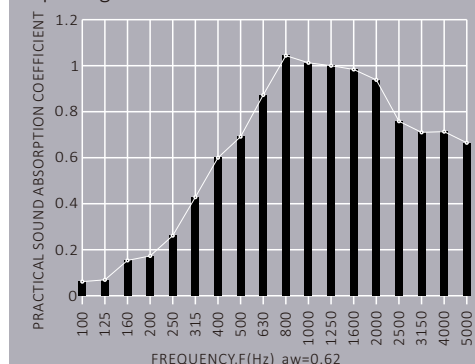

As seen in the graph, the 0.82" panel, mounted with 1.8" timber battens spacing and mineral wool insulation, obtains an absorption coefficient of 0.62 (MH).

Panels mounted on 3.94" pitch light steel joists and filled mineral wool insulation

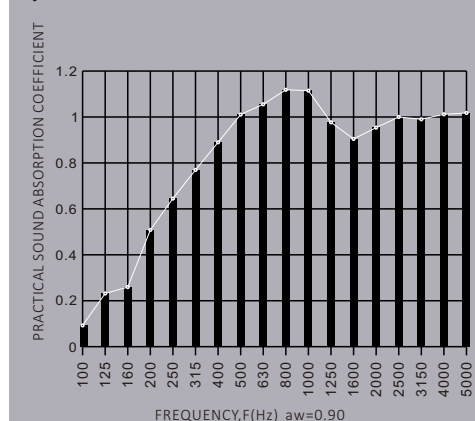

As shown, the panels were mounted on light steel joists with 3.94" spacing from the wall and filled with mineral wool insulation for an absorption coefficient of 0.90 (MH).